

IGNITION SWITCH

3/4" Mounting Hole
Switch with Synergy Bezel
and Accent Rings

MOUNTING: It is important that the mounting nut be tighten as much as possible but it must be done without damaging the mounting nut itself. If you must use a hand tool to accomplish this, install one of the colored "O" rings that will not be used after final assembly or wrap the nut with three layers of masking tape. Continue tightening the nut. Remove the tape or and install the final colored O-ring. We recommend

keeping the un-used O-rings in case the switch needs

re-tightening at a later date.

WIRING:

Engraved in the black plastic area on the base of the switch is abbreviated wording defining each stud terminal. Follow the chart below for the proper connections to the switch.

6		IGN YOU	1)	
 WITCH ORDING	USED FOR	CONNECTION DEFINITION	Access 24/7, Express, Bare Bonz I & II, AP-97, CP-94, DM-16 Wire Colors	CP-92 & Older Colors
BAT	Battery Feed	Requires a battery (hot all the time) wire.	Red	Yellow
IGN	Ignition Feed	This wire is hot with the key in the run & crank position.	Orange	Orange
ACC	Accessory Feed	This wire is hot with the key in the accessory & run position.	Brown	Red
		Terminal is inactive in the crank position.		
ST	Starter	This wire hot with the key in the crank position only.	L.t Blue	Lt Blue