

## To shorten the shaft, you will need the following:

Phillips screw driver, fine tooth hacksaw, bench vise

1) Figure out how much shorter you want the shaft

**INNER SHAFT** 

**OUTER SHAFT** 

- 2) Write the amount shorter here:
- 3) Remove the four screws from the shaft cover plate, see diagram
- 4) Before making any cuts, make sure the shaft nut is spun all the way on the shaft.
- 5) Cut the inner shaft by the amount from step 2, and cut the outer shaft by the same amount from step 2. Use a fine tooth hack saw to make the cuts. Be careful not to damage the threads or bend the shaft.
- PIN on the shaft is inserted in the small hole on linkage from the main drive gear. Double check that the PIN is in the hole on the link from the main drive gear!!

